## **CEW FUNCTION TEST STATION**

## READ ALL WARNINGS BEFORE USE No FireArms - Cew testing only







PLACE THE CEW INTO THE OPENING OF THE TESTING CHAMBER. ARM THE UNIT.



## CONDUCT THE FUNCTION TEST.


CONFIRM CID FOR ANY ERROR MESSAGES AND POWER IS >20%.

## **STEP 5**

MAKE THE CEW SAFE. REMOVE IT FROM THE TESTING CHAMBER.





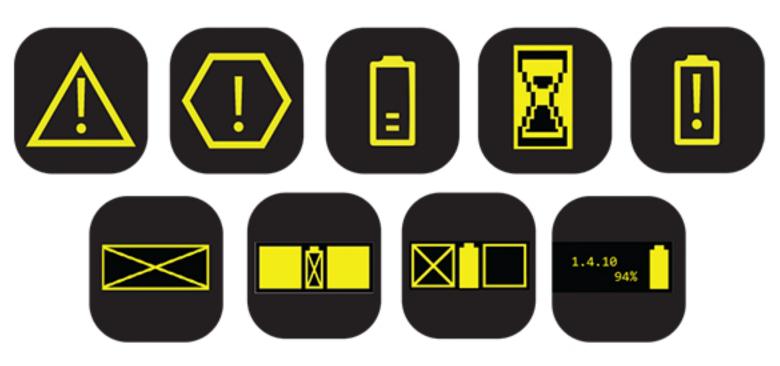



OBSERVE THE CEW ARCING PROPERLY ACROSS THE CARTRIDGE BAY(S) IN THE MIRROR OF THE TESTING CHAMBER.

FOR A HIGH RESOLUTION COPY OF THIS DOCUMENT, GO TO RAMPARTCORP.COM/CEW-DOCS



Speak to a specialist now: **1-855-729-0446** Email us: **support@rampartcorp.com** Online: **www.rampartcorp.com**